



## MHA-100-KS V1.1 – User Operation Guide



The MHA-100-KS mini house alarm is designed for simple everyday use. No keypads, passwords, or PIN codes are required. Just a key-switch to change modes and reset the alarm.

### LED Indicators

- Left LED (Status): Shows the alarm's current mode and sensor activity.
- Right LED (Power): Confirms the alarm is powered on.

### Using the Key-switch

- Supplied with two keys.
- Functions:
  - Switch between Standby and Armed modes.
  - Reset the alarm after it has been triggered.
- Operation:
  - With the key pointing towards Standby, the alarm is in Standby mode.
  - With the key pointing towards Armed, the alarm is in Armed mode after the exit delay period has expired.
- The key can be removed from both positions, it is important not to leave the key in the switch.

### Standby Mode

Use when the area is occupied (except at night if monitoring is required).

- Sensors: Movement detected by PIR sensors will not trigger the alarm.
- Status LED: Normally off. Lights up briefly when movement is detected, confirming sensors are working.
  - Recommended: Perform this test monthly.

- Panic Buttons: Active in Standby mode.
  - Triggering a panic alarm sounds the siren for ~4 minutes.
  - Siren resets automatically but can be re-triggered.

## Armed Mode

Set when leaving the area or before going to sleep.

- Activation:
  - Set the switch to the Armed position → exit delay begins (~20 seconds).
  - At ~18 seconds, siren beeps twice (warning that arming is imminent).
  - Once armed, Status LED stays on steadily.
- Channels:
  - Entry delay channel: Allows time to disarm when entering.
  - Instant channel: Triggers siren immediately.
  - Panic buttons remain active.
  - Should the alarm be triggered whilst armed, the siren sounds for ~3minutes.
  - The alarm can be re-triggered whilst away.
- Entry/Exit:
  - Always use the timed area.
  - Set the switch to the Standby position → alarm returns to Standby.
- Triggered Alarm Check:
  - If Status LED flashes when you return, the alarm was activated while you were away.
  - Investigate to confirm whether it was a false alarm.

## Night-Time Operation

- Arm the alarm before going to bed.
- Place sensors so they do not cover areas you may walk through at night (e.g., bathroom routes).
- In the morning, set the alarm back to Standby before entering monitored areas.

### **Battery / Power Failure:**

If the power fails whilst you're away and the backup battery runs flat. The alarm will power up in its last mode when power is restored.



# MHA-100-KS Quick User Cheat Sheet

## LED Indicators

LED	State	Meaning
<b>Power LED (Right)</b>	On (steady)	Alarm powered
	Off	No power
<b>Status LED (Left)</b>	Off	Standby Mode
	On (steady)	Armed Mode
	Flashing	Alarm was triggered while away
	Brief flash in Standby	PIR sensor detected movement (sensor test)

**Tip:** Test sensors monthly by walking past them in Standby — Status LED should flash.